


Tools required: 10mm Socket With Exception
13 mm Socket With Exception

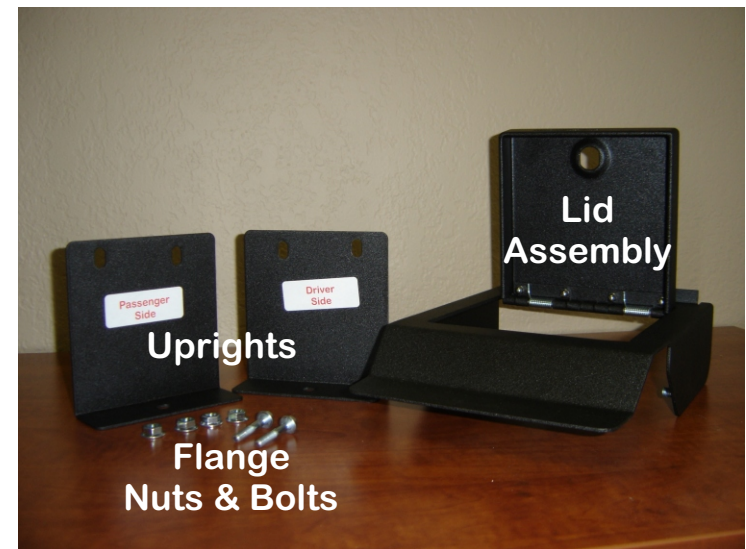

- 1) Completely remove contents from your factory console. Notice two 10mm mounting bolts in the base of your console, using the 10mm socket remove these mounting bolts and put aside.
- 2) Take the lid assembly and place into the console, you will need to angle the piece to fit through the opening. See figure 1
- 3) Take the drivers side upright and place it inside the console. See figure 2
- 4) Reach into the console and lift the lid assembly up into position and put the driver side upright into place. Using the 13mm flange nuts that came with your vault thread them into place. Only finger tighten at this time. See figure 3
- 5) Repeat the previous step with the passenger side upright. See figure 4
- 6) Take the 10mm flange bolts provided with your vault and place them through the holes in the uprights and into the mounting points from step 1. Only finger tighten at this time. See figure 5
- 7) Before tightening all the hardware, make sure your Console Cover is properly positioned. Now tighten all hardware.

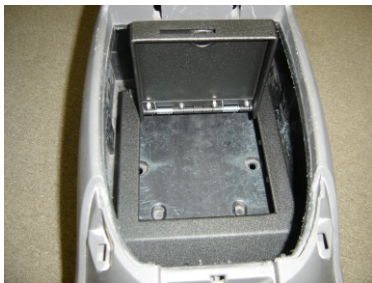


Fig. 1



Fig. 2

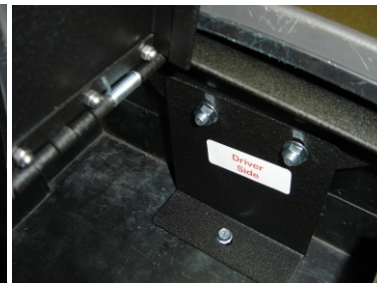


Fig. 3



Fig. 4

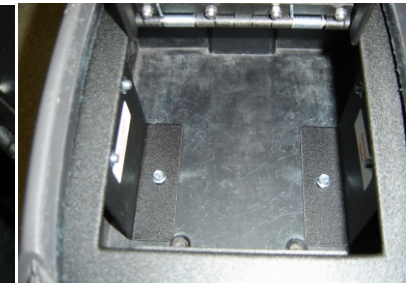


Fig. 5