

CONSOLE VAULT

UNIQUE SECURITY SOLUTIONS



MODEL #1012

2005 - 2010 Toyota Tacoma INSTALLATION INSTRUCTIONS

Tools required: 10mm Socket With Extension
#1 Philips Screwdriver
#2 Philips Long Screwdriver

Toll Free 1-866-587-4712 www.consolevault.us

- 1) Remove factory console lid: Open lid, using a #1 Philips head screwdriver remove the five screws holding the inner lid cover. Next using the #1 Philips head screwdriver remove the four screws holding the lid to the hinge bracket. (See Fig. 1,2,&3)
- 2) Remove hinge bracket: Notice on either side of the hinge bracket there are covers covering the mounting screws holding the hinge bracket to the factory console. Remove these covers and remove the four screws using the #1 Philips screwdriver. (See Fig. 3,4,&5)
- 3) Using the 10mm socket, remove the two mounting bolts at the bottom of the factory console. (See Fig. 6)
- 4) Place the Console Vault into place. Notice that there are two pre-drilled holes in the bottom of the vault. Using the replacement screws that came with the vault and the #2 long Philips screwdriver secure the Console Vault into place. (See Fig. 7)
- 5) Reassemble factory console lid.

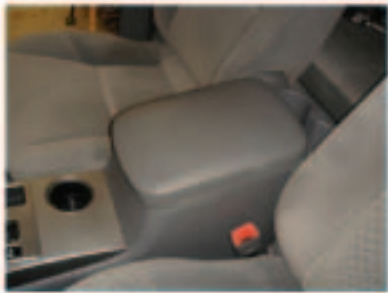


Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7