

Fig. 1

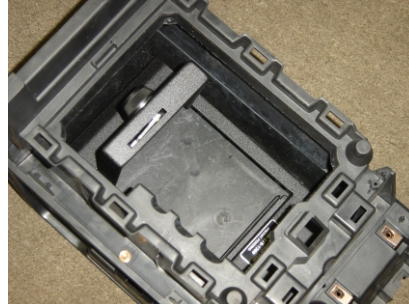


Fig. 2

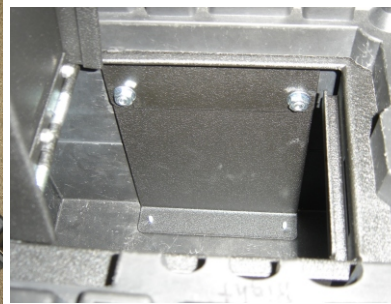


Fig. 3

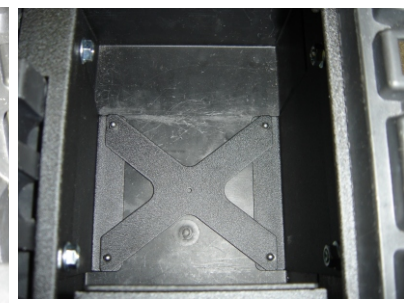


Fig. 4

- 1) Completely remove contents from your factory console.
- 2) Take the lid assembly and place into the console, you will need to angle the piece to fit through the opening. See figure 1 and figure 2
- 3) Take the drivers side upright (both uprights are the same) and place it inside the console. Reach into the console and lift the lid assembly up into position and put the driver side upright into place, this is designed to fit very tight, (it maybe necessary to apply a little extra effort to properly position the driver's side upright). Using the 13mm flange nuts that came with your vault thread them into place. Only finger tighten at this time. See figure 3. Repeat procedure for the passenger side upright.
- 6) Place the "X" bracket into place, see figure 4. This is designed to fit very tight, piece should sit flush. Secure bracket into place using the acorn nuts.
- 7) Make sure the Vault is in its proper position. Now tighten all hardware.